



# Putting on (donning) personal protective equipment (PPE) for aerosol generating procedures (AGPs). Airborne Precautions – Gown version

## Use safe work practices to protect yourself and limit the spread of infection

- keep hands away from face and PPE being worn
- change gloves when torn or heavily contaminated
- limit surfaces touched in the patient environment
- regularly perform hand hygiene
- always clean hands after removing gloves


## Pre-donning instructions

- ensure healthcare worker hydrated
- tie hair back
- remove jewellery
- check PPE in the correct size is available

Putting on personal protective equipment (PPE). The order for putting on is gown, respirator, eye protection and gloves. This is undertaken outside the patient's room.

## Perform hand hygiene before putting on PPE

- 1** Put on the long-sleeved fluid repellent disposable gown - fasten neck ties and waist ties.

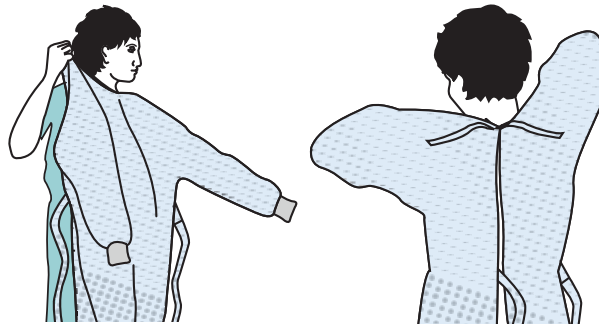


- 2** Respirator.

Note: this must be the respirator that you have been fit tested to use. Where goggles or safety spectacles are to be worn with the respirator, these must be worn during the fit test to ensure compatibility



Position the upper straps on the crown of your head, above the ears and the lower strap at the nape of the neck. Ensure that the respirator is flat against your cheeks. With both hands mould the nose piece from the bridge of the nose firmly pressing down both sides of the nose with your fingers until you have a good facial fit. If a good fit cannot be achieved **DO NOT PROCEED**  
**Perform a fit check.** The technique for this will differ between different makes of respirator. Instructions for the correct technique are provided by manufacturers and should be followed for fit checking

- 3** Eye protection - Place over face and eyes and adjust the headband to fit

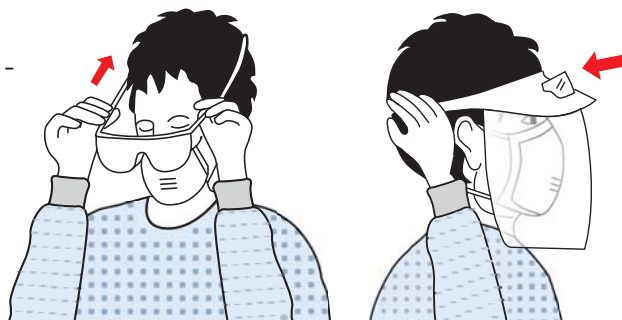

- 4** Gloves - select according to hand size. Ensure cuff of gown covered is covered by the cuff of the glove.