


Introduction

This notice is to inform operators of LLWR IP-2 approved containers that the Freight Container (Safety Convention) Regulations, have been updated and are now issued as 2017 edition. The new Freight Container (Safety Convention) Regulations 2017, came into effect April 2017. These updated regulations have implemented a change that affects all Freight Container manufactured from 1st July 2014 onwards operating on the ACEP Scheme (Regulations 6 and 7).

Impact on LLWR Fleet of TC01 and TC03 Containers

The Safety Convention Regulations 2017 directs the Safety of Containers (CSC) Plate must read with 'Transverse racking test force' in Newtons. (See image below)

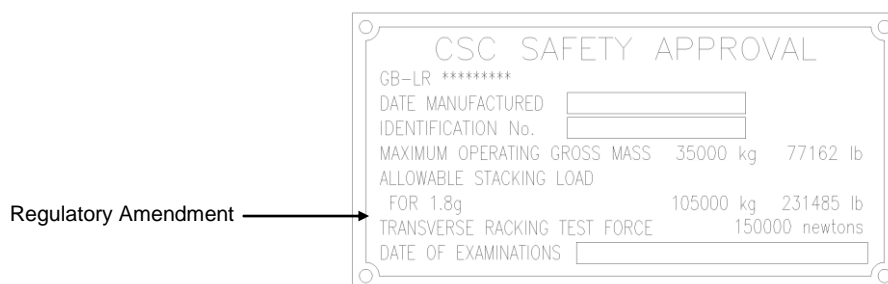

Post – 1st July 2014 manufactured containers – CSC Plate requirements in accordance with 2017 Regulations

This key regulatory change invokes a need to replace CSC Plates.

Agreed Way Forward

1. Affected TC01 Containers residing in UK, that are to be transported to LLWR for final disposal prior to their ACEP re-inspection date – no action required.
2. Affected Containers residing abroad - require the CSC plate changed to meet the new regulations, prior to being prepared for transporting to UK.
3. Affected Containers that are intended to remain on re-use system post next ACEP re-inspection date – require conversion to TC01R and the CSC Plate changed to meet the new regulations.

If you are a custodian of one of the affected containers (see Table 1), Packaging Services will issue you with complimentary replacement CSC plates for you to affix to the container, as defined under Agreed Way Forward Point 2 and 3.

Serial Numbers and Custodians of affected Containers
Table 1

Custodian	Container ID
Sellafield	2910/7967
	2910/7966
	2910/7969
	2910/8052
	2910/7967
	2910/8054
	2910/8055
	2910/8060
	2910/8061
	2910/8062
	2910/8063
	2910/8064
	2910/8065
	2910/8067
	MEB 2910/7365
	MEB 2910/7366
	MEB 2910/7367
	MEB 2910/7368
	MEB 2910/7369
	MEB 2910/7370
	MEB 2910/7371
	MEB 2910/7372
	MEB 2910/7373
	MEB 2910/7374
	MEB 2910/7870
	MEB 2910/7871
	MEB 2910/7872
	MEB 2910/7873
MEB 2910/7874	
Sizewell A	2910/8159
	2910/8160
Berkeley	2910/7888
LLWR	2910/8144
	2910/8164

CSC Plate Fixing Instructions

Upon receiving the replacement CSC Plate, check the identification number aligns to the package serial number. Remove old CSC plate, by drilling out rivets. Affix the replacement CSC Plate with “advel” monobolts (supplied) and apply SILFIX HM Clear Silicone Sealant to the upper edges of the plate. Discard the old CSC plate.

Further Information and Questions

If you require any further information regarding licence requirements or have any queries relating to this Customer Notice, please send an e-mail to: transportandlogistics@llwrsite.com or call 019467 70301

Distribution List

We have issued this Notice to the following people from your Company's Contact Details Form (Reference: WSC-FOR-CON):

- All nominated representatives
- [Insert Role Titles as required]

If you need to update these details, please submit a revised Form: <http://llwrsite.com/waste-services/new-customers/>